



# 1400 / 1500 COUPLING

## INSTALLATION GUIDE



1. Visually inspect the coupling to ensure it is of the required outside diameter for the desired application. Make sure the coupling is complete and there are no missing nuts, bolts or washers.
2. Clean the pipe ends to ensure that all dirt and irregularities have been removed.
3. Disassemble the coupling and slide the appropriate end rings over the appropriate pipe.
4. Lubricate the coupling gaskets and the pipe with potable, NSF certified lube. ROBAR recommends SLIKSTYX.
5. Slide the appropriate gasket over the pipe. The tapered end must face the pipe ends.
6. Slide the center ring over the pipe, and position the center ring over the pipe gap.  
Note: For minimum and maximum pipe gaps refer to AWWA C-219.
7. Push the gaskets and end rings into position against the center rings. Be sure to maintain an equal spacing between the 2 pipe sections.
8. Slide the bolts into place and tighten nuts using a torque wrench. Torque each bolt alternating between bolts in a "star" pattern to 80 lbs. ft.
9. Pressure test the pipeline prior to backfilling.

### CAUTION



Couplings do not prevent pipe pullout.  
Suitable restraint should be used when required.

**ROBAR INDUSTRIES LTD. - BRITISH COLUMBIA**

Phone: (604) 591 - 8811  
Toll Free: (800) 663 - 6553  
Fax: (604) 591 - 5288

**LES PRODUITS INDUSTRIELS ROBAR INC. - QUEBEC**

Phone: (450) 641 - 9525  
Toll Free: (800) 315 - 9525  
Fax: (450) 641 - 4894

Website: [www.robarindustries.com](http://www.robarindustries.com) / E-mail: [waterworks@robarindustries.com](mailto:waterworks@robarindustries.com)