




2408 SERVICE SADDLE

INSTALLATION GUIDE

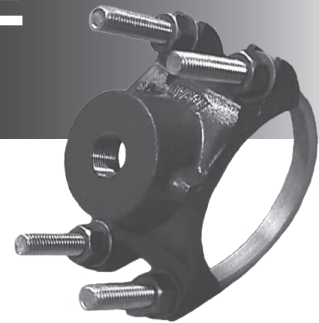

1. Visually inspect the Service Saddle to ensure it is the required nominal and outlet size for the desired application. Make sure that the saddle is complete and that there are no missing nuts or washers.
2. Completely remove straps from the saddle body and check the fit of the saddle on the pipe. Note: **2408** Saddles are designed for use on RIGID PIPE ONLY (DI, Steel, A/C).
3. Clean the entire circumference of the pipe where the saddle is to be installed. Make sure to clean the threads with a wire brush to remove any sand or dirt. Lubricate the saddle gasket with a potable, NSF certified lube. ROBAR recommends SLIKSTYX.
4. Position the saddle on the pipe and install the straps. Hand tighten the nuts while making sure that the straps are positioned evenly. Be sure to avoid rotating the saddle once this has been done. Using a torque wrench, tighten the nuts evenly and incrementally in a cross pattern to 45 ft. lbs. A cross pattern tightening method allows for even and positive gasket seating.

ROBAR INDUSTRIES LTD. - BRITISH COLUMBIA

Phone: (604) 591 - 8811
Toll Free: (800) 663 - 6553
Fax: (604) 591 - 5288

LES PRODUITS INDUSTRIELS ROBAR INC. - QUEBEC

Phone: (450) 641 - 9525
Toll Free: (800) 315 - 9525
Fax: (450) 641 - 4894

Website: www.robarindustries.com / E-mail: waterworks@robarindustries.com